



FEATURE

1. Press keypad with LED screen
2. User-defined code, Programmable 4-6 digit user code
3. 6 digit master code to open the lock for emergency
4. 125 opening records can check by CEU
5. Automatically motorized locking mechanism, integrated with LED light, motorized mechanism, bolt and battery case.
6. Low power, Low battery warning, Micro-USB port for emergency charging.
7. Time lock for 15 mins if wrong entry for three (3) times

DEFAULT CODE

MASTER CODE: 888888, USER CODE: 1234

HOW TO USE BY GUEST

- Push the door closed, enter 4-6 digit combination, then press "CLOSE"
 - Screen shown "CLOSE", then "CLOSED" door locked.
 - Enter the same combination
 - Screen shown "OPEN", then "OPENED" door unlocked. Light will be on for 15 sec after opened
- Note: Guest can press "CLOSE" to lock the door in 10 mins after opened, user code won't change.

HOW TO MAKE CODE INVISIBLE

- Press "CLEAR" twice then "CLOSE"
 - Two (2) beeps, "O-ON" shown; When code entered, "OOOO" shown, code invisible.
- Note: Same operation to make the code visible.

HOW TO TURN ON LED LIGHT

- Door unlocked, press "CLEAR" for 1 sec
 - Two (2) beeps, light on, Light will be on for 15 sec before door locked.
- Note: same operation to turn off the light.
- Note: light will be on for 15 sec after door opened, and turn off automatically if door locked.

WRONG TRY PENALTY

Time lock for 15 mins if three (3) consecutive invalid code entry. No respond to keypad.
" HOLD ***" shown, ** indicates the time of keypad lock.



SETTING

1. HOW TO CHANGE MASTER CODE

- Door unlocked, enter valid master code, then "CLOSE"
- Screen shown "NEU", enter 6 digit combination then "CLOSE"
- Screen shown "AGAIN", enter the same combination, then "CLOSE"
- Screen shown "DONE", master code changed

Note: ① Master code can open the door for emergency.

TIME INFORMATION

- Door opened, touch screen to activate, press "*" for 1 sec
- Time shown. YY-MM-DD then HH-MM-SS.

For example "09213", "152030" indicates Feb. 13th, 2019, 15:20:30

Note: To ensure the records correct, to update the time by CEU when time inaccurate.

CEU FUNCTION

1. Audit Trail. 125 opening records can keep, new record will cover the oldest one when more than 125.
2. Light Setting. Light can be set on or off automatically after opened
3. Time setting. To update the time by CEU
4. To change communication code
5. To connect with computer by printing the records

LOW BATTERY WARNING

"LO-BAT" shown indicates low battery, please replace the battery in time. When the lock can't open by low

batter, use USB port to connect to outer battery to open the door for emergency.

OTHER FUNCTIONS

"E-RUN" or "B-LOC" shown indicates that motor doesn't work or there is something wrong with position

switch, please check the motor and position switch in time

INITIALIZATION

- Power off, discharge the power by short-circuiting DC terminal
- Power on after short-circuiting CY1 terminal
- System initialized, hotel mode, user code 1-2-3-4, master code: 8-8-8-8-8-8, communication code: 1-2-3-4-5-6.

