



FEATURE

1. Press keypad with LED screen
2. Programmable 4-6 digit user code, good for hotel guest
3. 6 digit master code to open in emergency
4. Automatically motorized locking mechanism.
5. Low battery warning and outer-emergent power supply
6. Wrong try penalty
7. Mechanical lock for open in emergency

DEFAULT CODE

MASTER CODE: 888888, USER CODE: 1234

HOW TO USE BY GUEST

- Push the door closed, enter 4-6 digit combination, then press "CLOSE"
 - Screen shown "CLOSE", then "CLOSED" door locked.
 - Enter the same combination
 - Screen shown "OPEN", then "OPENED" door unlocked. Light will be on for 15 sec after opened
- Note: Guest can press "CLOSE" to lock the door in 10 mins after opened, user code won't change.

HOW TO MAKE CODE INVISIBLE

- Press "CLEAR" twice then "CLOSE"
 - Two (2) beeps, "O-ON" shown; When code entered, "OOOO" shown, code invisible.
- Note: Same operation to make the code visible.

HOW TO TURN ON LED LIGHT

- Door unlocked, press "CLEAR" for 1 sec
 - Two (2) beeps, light on, Light will be on for 15 sec before door locked.
- Note: same operation to turn o the light.
- Note: light will be on for 15 sec after door opened, and turn o automatically if door locked.

WRONG TRY PENALTY

Time lock for 15 mins if three (3) consecutive invalid code entry. No respond to keypad.
" HOLD ***" shown, ** indicates the time of keypad lock.



SETTING

1. HOW TO CHANGE MASTER CODE

- Door unlocked, enter valid master code, then "CLOSE"
- Screen shown "NEU", enter 6 digit combination then "CLOSE"
- Screen shown "AGAIN", enter the same combination, then "CLOSE"
- Screen shown "DONE", master code changed

Note: ① Master code can open the door for emergency.

LOW BATTERY WARNING

"LO-BAT" shown indicates low battery, please replace the battery in time. When the lock can't open by low battery, use USB port to connect to outer battery to open the door for emergency.

OTHER FUNCTIONS

"E-RUN" or "B-LOC" shown indicates that motor doesn't work or there is something wrong with position switch, please check the motor and position switch in time

INITIALIZATION

- Power o, discharge the power by short-circuiting DC terminal
- Power on after short-circuiting CY1 terminal
- System initialized, hotel mode, user code 1-2-3-4, master code: 8-8-8-8-8-8,

